

ARMY  
NAVY  
AIR FORCE

---

TM 11-6625-3024-24P  
EE641-AC-PLL-010/E154 SYSEX  
TO 33AA50-5 4-1

---

ORGANIZATIONAL, DIRECT SUPPORT, AND  
GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST  
(INCLUDING DEPOT MAINTENANCE REPAIR  
PARTS AND SPECIAL TOOLS)  
FOR  
TEST SET, MAGNETIC TAPE  
TRANSPORT TS-4002/UYH-5  
(NSN 6625-01-128-2432)

---

DEPARTMENTS OF THE ARMY, THE NAVY, AND THE AIR FORCE

6 SEPTEMBER 1985

TECHNICAL MANUAL  
 No. 11-6625-3024-24P  
 TECHNICAL MANUAL  
 EE641-AC-PLL-010/E154 SYSEX  
 TECHNICAL ORDER  
 No. 33AA50-5-4-1

DEPARTMENTS OF THE ARMY,  
 THE NAVY, AND THE AIR FORCE

WASHINGTON, DC, 6 September 1985

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT  
 MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST  
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS  
 AND SPECIAL TOOLS)  
 FOR  
 TEST SET, MAGNETIC TAPE TRANSPORT TS-4002(UYH-5)  
 (NSN 6625-01-128-2432)  
 Current as of 26 November 1984**

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AM-SEL-ME-MP Fort Monmouth, New Jersey 07703-5007.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to prime ALC/MST.

For Navy, mail comments to the Commander, Naval Electronics Systems Command, ATTN: ELEX 8122, Washington, DC 20360.

In either case, a reply will be furnished direct to you.

**Table of Contents**

		Page	Illus Figure
SECTION	I. Introduction .....	1	
	II. Repair Parts List .....	1-1	
GROUP	00 Test Set, Magnetic Tape Transport .....	1-1	1
	Side Panel, Handle, 1000-539 .....	2-1	2
	01 Electronic Housing Assy, 1000-441 .....	3-1	3
	Mother Board Assy, 1000-442 .....	4-1	4
	Circuit Card Assy, 1000-444 .....	5-1	5

Table of Contents—Continued

		Page	Illus Figure	
GROUP	01	Output Connector Assy, 1000-450 .....	6-1	6
		Ground Bus Bar Assy, 1000-455 .....	7-1	7
		Side Panel Assy, 1000-474 .....	8-1	8
		Side Panel Assy, 1000-468 .....	9-1	9
	0101 Printed Circuit Cards A2A1, A2A2, A2A3, A2A4, A2A5, A2A6			
			10-1	10
			11-1	11
			12-1	12
			13-1	13
			14-1	14
			15-1	15
			16-1	16
	0102 Power/Stop Switch Assy, 1000-461 .....		17-1	17
	0103 Blower, 1000-538 .....		18-1	18
	0104 Connector Panel Assy (See Group 01 for parts)			
	02	Power Supply Assy, 1000-401 .....	19-1	19
		Heat Sink Assy, 1000-404 .....	20-1	20
		Circuit Card Assy, 1000-409 .....	21-1	21
		Circuit Card Assy, 1000-412 .....	22-1	22
		Capacitor-Connector, 1000-420 .....	23-1	23
		Capacitor-Filter Assy, 1000-427 .....	24-1	24
		Rear Panel Assy, 1000-432 .....	25-1	25
	03	Cables		
Cable Assy, 100-5S4 .....		26-1	26	
Cable Assy, 1000-566 .....		27-1	27	
SECTION	III.	Special Tools List (Not applicable)		
	IV.	National Stock Number and Part Number Index .....	I-1	

# SECTION I

## INTRODUCTION

### 1. Scope

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the TS-4002/UYH- 5. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header.


*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphameric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns (Section II and III)

*a. Item No. (Column 1).* Indicates the number used to identify items called out in the illustration.

*b. SMR Code (Column 2).* The source, maintenance, and recoverability (SMR) code is a five-position code containing supply-requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

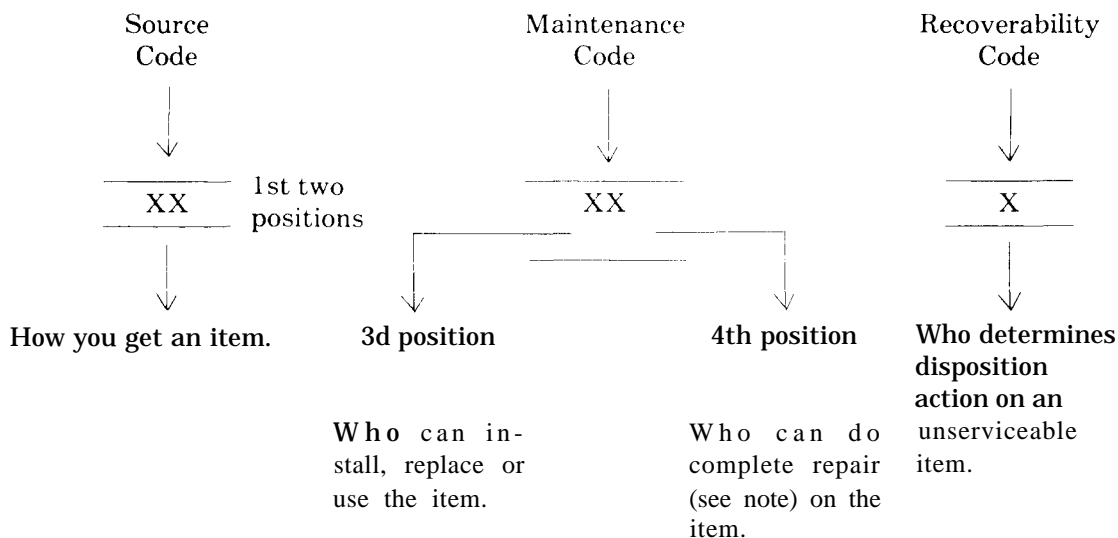

#### NOTE

Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.