

ARMY TM 11-6625-3041-30P
AIR FORCE TO 33A1-8-908-14

DIRECT SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOL LISTS
(INCLUDING DEPOT REPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)
FOR
DIGITAL DATA GENERATOR SG-1139()/G
(NSN 6625-01-136-2046)

DEPARTMENTS OF THE ARMY AND THE AIR FORCE

19 OCTOBER 1983

Technical Manual
No. 11-6625-3041-40P
Technical Order
No. TO 33A1-8-908-14

DEPARTMENTS OF THE ARMY
AND THE AIR FORCE

Washington, DC, 19 October 1983

**DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
[INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS]
FOR
DIGITAL DATA GENERATOR SG-1139[]/G
[NSN 6625-01-136-2046]**

Current as of 25 July 1983

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028(Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Command, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-ME-MP, Fort Monmouth, NJ 07703.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to prime ALC/MST.

In either case, a reply will be furnished direct to you.

Table of Contents

	Page	Illus Figure
Section I.	Introduction	1
Section II.	Repair Parts List	5
Group 00	Digital Data Generator SG-1139()/G	5
01	Circuit Card Assembly, Multi Vdc, A1	9
02	Circuit Card Assembly, AC Input, A2	15
03	Circuit Card Assembly, Transmit Board, A3	19
04	Circuit Card Assembly, Transmit 2 Board, A4	23
05	Circuit Card Assembly, Receive Board A5	27
06	Circuit Card Assembly, Receive 2 Board, A6	31
07	Accessory Set	33
	0701 Interface Assembly	35
	0702 Cable Assembly, Power	37
	0703 Cable Assembly, Coaxial	37
08	Case Assembly, Electrical Equipment	41
	0801 Connector Assembly, Logic	45
	0802 Connector Assembly, Power Supply Interconnect	47
09	Control Filter Assembly	51
Section III.	Special Tools List (Not applicable)	
Section IV.	National Stock Number and Part Number Index	53

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support maintenance of the SG-1139()/G. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all parts numbers appearing in the listings. National stocks numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which,

because of probable discontinuance or shut-down of production facilities, would prove uneconomical to reproduce at a later time.

<i>Code</i>	<i>Definition</i>
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 750.1.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O	Support item is removed, replaced, used at the organizational level.
F	Support item is removed, replaced, used at the direct support level.
D	Support items that are removed, replaced, used at depot, mobile depot, specialized repair actively only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	Nonreparable. No repair is authorized.