# **TECHNICAL MANUAL**

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

**FOR** 

PULSE SIGNAL GENERATOR SG-1205(V)1/U (NSN 6625-01-137-5369)

Techni cal Manual

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 30 April 1984

No. 11-6625-3050-24P

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
PULSE SIGNAL GENERATOR SG-1205(V)I/U
(NSN 6625-01-137-5369)

Current as of 23 January 1984

## REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-ME-MP, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

## Table of Contents

				IIIus
			Page	Fi gure
Section I.		Introduction	1	
	11.	Repair Parts List	5	
Group	00	Pulse Signal Generator SG-1205(V)I/U	5	1
	01	Front Panel Assembly	9	2
	02	Rear Panel Assembly	11	3
	03	Chassis Subassembly		4
		0301 Main PCB Assembly	19	5
	04	Output Amplifier Assembly		6
		0401 Shi el d Assembly	29	7
Secti on	111.	Special Tools List (Not applicable)		
	١٧.	National Stock Number and Part Number Index	. 30	

# SECTION I INTRODUCTION

# 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the SG-1205(V)1/U. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

- a. Section II. Repair Parts List.
  A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.
- b. <u>Section III.</u> <u>Special Tools List.</u> Not-applicable.
- c. Section IV. National Stock Number-and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.
- 3. Explanation of Columns
- a. <u>Illustration.</u> This column is divided as follows:

- (1) <u>Figure number</u>. Indicates the figure number of the illustration on which the item is shown.
- (2) <u>I tem number</u>. The number used to identify item called out in the illustration.
- b. <u>Source. Maintenance. and Recoverability (SMR) Codes.</u>
- (1) <u>Source code</u>. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code Definition

- PA -- Item procured and stocked for anticipated or known usage.
- XA -- Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly,
- XB -- Item is not procured or stocked.

  If not available through salvage, reguisition.
- XD -- A support item that is not stocked.

  When required, item will be procured through normal supply channels.

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 750.1.

(2) <u>Maintenance code</u>. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The